# FLEET BOARD

# GUIDE
# REINSTALLATION
# FLEETBOARD COCKPIT

**PLEASE IMPLEMENT BY 29.09.2018 AT THE LATEST –**
THEREAFTER, FLEETBOARD SERVICES CAN NO LONGER BE USED ON OLDER COCKPIT VERSIONS

# RE-INSTALLATION OF FLEETBOARD COCKPIT
## STEP 1

- Start FleetBoard Cockpit

- Click in the navigation at the top on "Settings", then on "Settings"



FLEET BOARD

# RE-INSTALLATION OF FLEETBOARD COCKPIT
## STEP 2

- Click on "Connection"

- Note your settings under "Connection", such that you can re-enter them after re-installation or take a screenshot and save it.

- Then close the Cockpit

# RE-INSTALLATION OF FLEETBOARD COCKPIT
## STEP 3

- Upload the new Cockpit update (Version 1.26.0, 28.08.2018) from our **Update page**

- Install the Cockpit update and follow the installation instructions

## DOWNLOAD OF THE COCKPIT UPDATES

**VERSION 1.26.0 (28.08.2018)**

Download the latest version of the Fleetboard Cockpit.

›

FLEET
BOARD

# RE-INSTALLATION OF FLEETBOARD COCKPIT
## STEP 4

- Click in this message on "OK" to replace the existing Cockpit installation with the new Cockpit installation



Setup

Another version of the program was found in your system. Do you want to to remove this version? If you do not remove it, the installation will be cancelled.

OK      Cancel
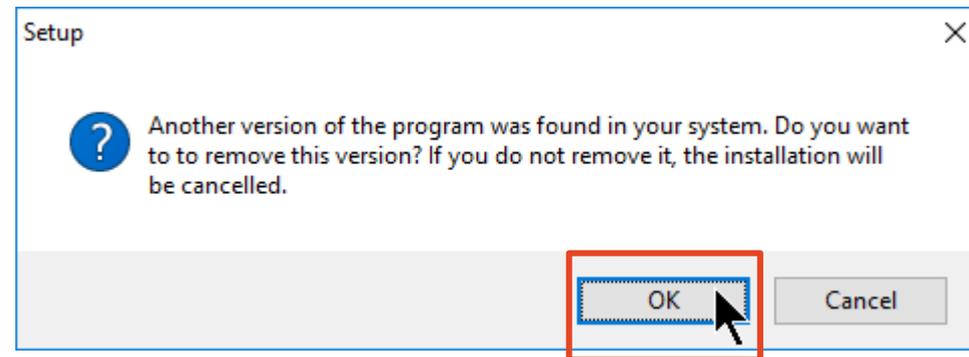
FLEET BOARD

- Follow the further installation instructions

- Click on the right in the message on "No" to retain the existing settings in the Cockpit.

- Close the installation of the Cockpit
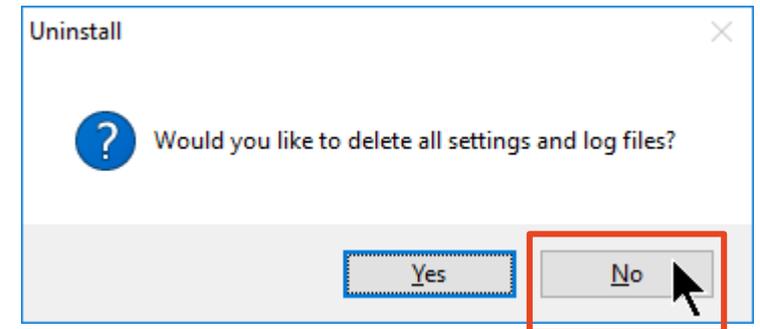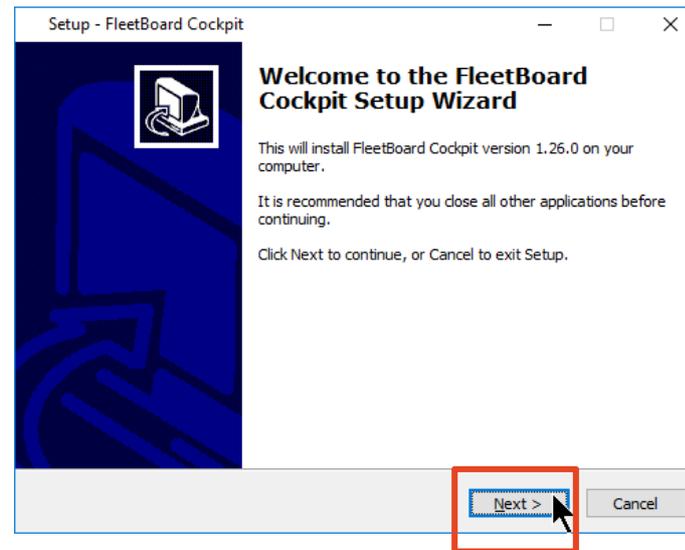
- Open the newly installed Cockpit

- Click on "Connection"
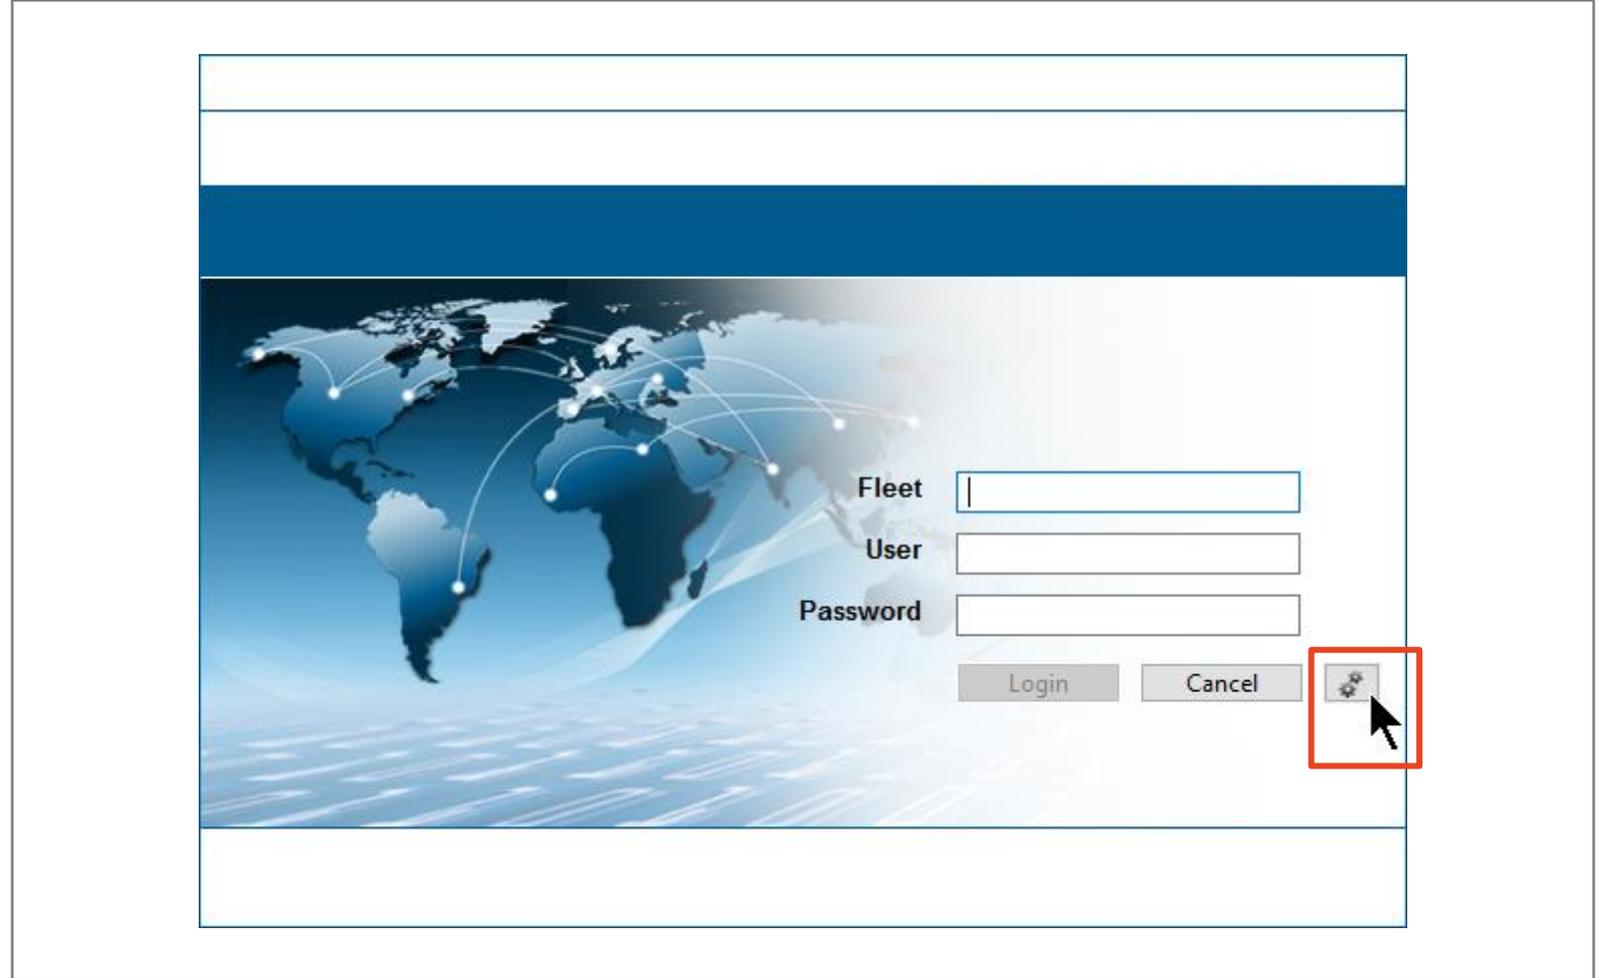
# RE-INSTALLATION OF FLEETBOARD COCKPIT
## STEP 7

- Enter the settings you noted in Step 2

- Confirm with "OK"

- Now you can log in and use the Cockpit as usual



FLEET BOARD